# **Narrow Style Door Activator Button Switches**

#### Section 1


# **General Description**

The 425 series door activator switches are designed to provide unobtrusive, reliable activation of any automatic door at the doorframe. The unique design of these switches includes interchangeable self-sticking mylar labels for customizing the face plate.


### Section 2

## **Basic Installation**


1) Make the required cutout in the door frame.

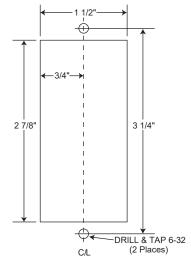

- 2) Remove the face plate from the button switch assembly.
- 3) Connect the necessary signal wires to the appropriate switch contacts on the microswitch-standard connections are COM and N.O.

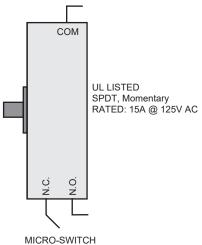

4) Attach the button switch assembly in the cutout prepared in step 1 with the 6-32 x 5/8" screws provided. Do Not Over Tighten!

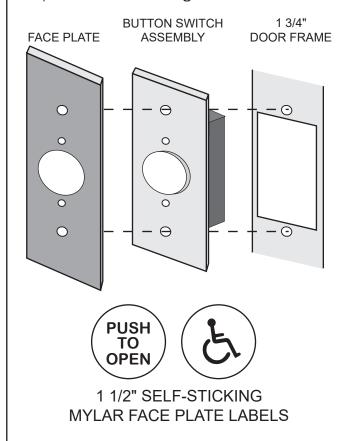

- 5) Reinstall the face plate (6-32 x 1/2" screws provided).
- Attach desired label to face plate.



NOTICE: For surface mounting applications, order the 1106 surface mount box.

For further technical assistance, contact the factory at 1-317-842-2545.